Starter Lock/Clutch Pedal Switch Relay

⇒ Manual transmission only
From November 2004

Notes:
Information for
- ♦ Relay and fuse arrangements
- ♦ Connector arrangements
- ♦ Control Modules and Relays
- ♦ Ground connections

⇒ Component Locations!
Information for
- ♦ Troubleshooting Procedures

⇒ Guided Fault Finding using VAS 5051/5052

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Starter, Starter Lock/Clutch Pedal Switch Relay

B	Starter
D	Ignition/Starter Switch
F194	Clutch Pedal Starter Interlock Switch
J434	Starter Lock/Clutch Pedal Switch Relay
T17d	17-Pin Connector, red, connector station E-box, plenum chamber
T17j	17-Pin Connector, brown, connector station E-box, plenum chamber
238	Ground Connection 1 (in interior wiring harness))
D97	Connection (50) (in engine compartment wiring harness), right
Q	⇒ Current wiring diagram for engine

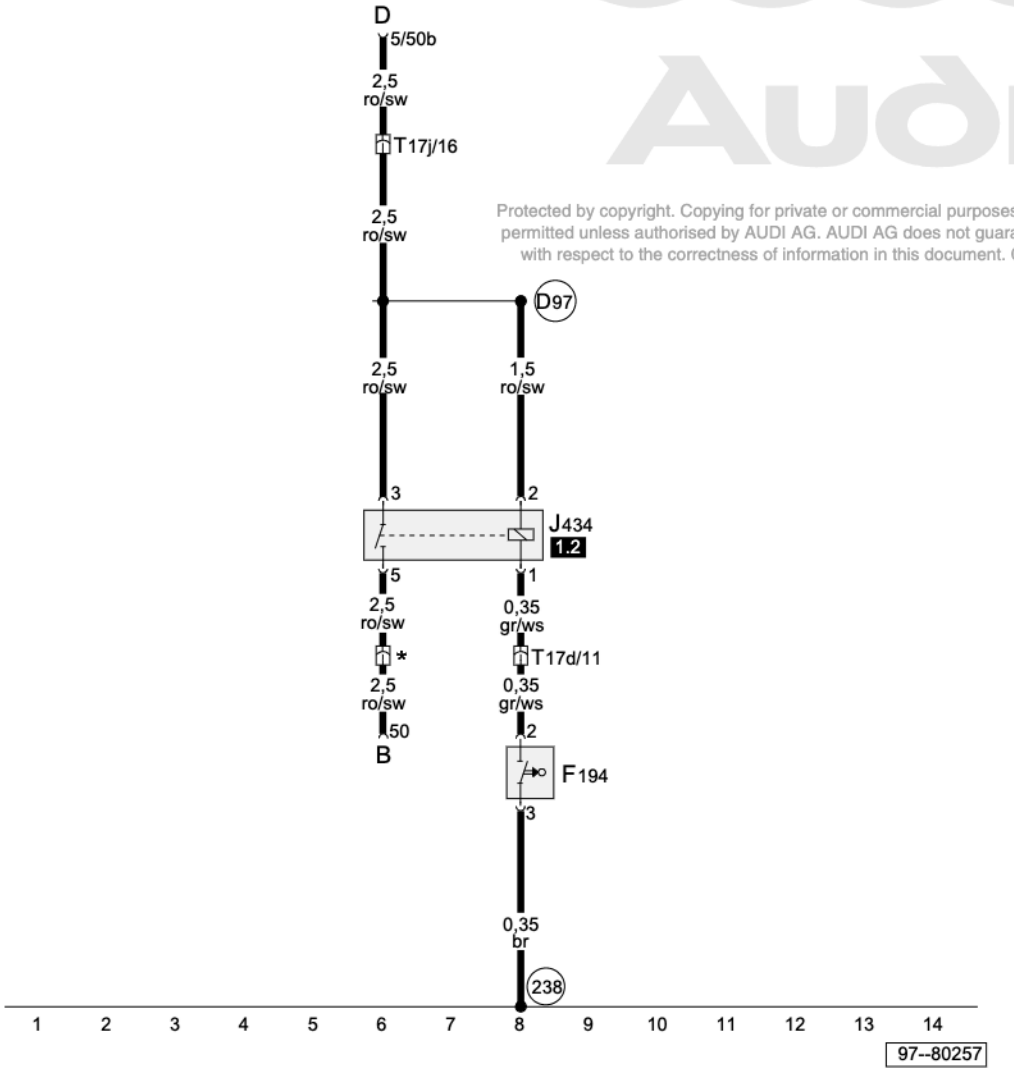

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink